



# Inbetriebnahme & Montageanleitung

## Touch Nightlight Air

Art. Nr.: 100340

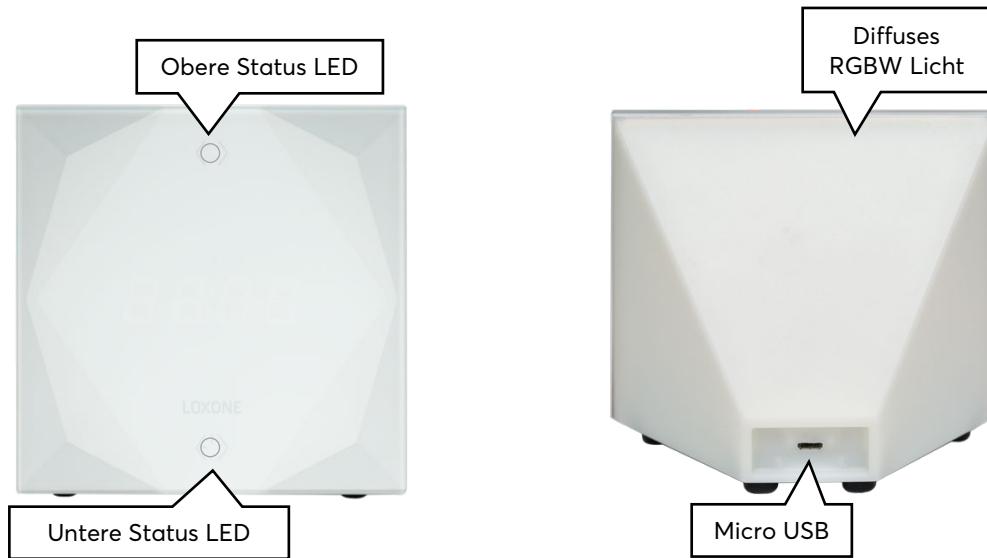

### 1 | Stromversorgung

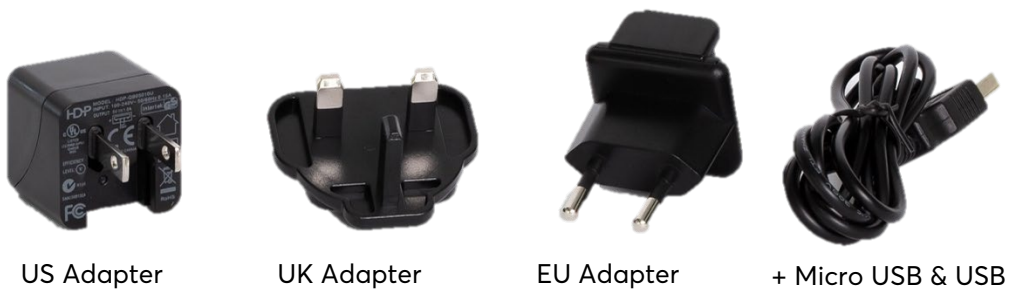

### 2 | Einlernmodus – 5 Sekunden Taste T7



### 3 | Loxone Air Gerät einlernen:

[loxone.com/help/airdevice](https://loxone.com/help/airdevice)


### 4 | Verbinden von T5, Wecker und Smartaktor:

[loxone.com/help/smartaktor](https://loxone.com/help/smartaktor)

[loxone.com/help/touchnightlight](https://loxone.com/help/touchnightlight)

### 5 | Loxone Config:

Aus dem Peripheriebaum, den Baustein "Touch Nightlight Air" in die Loxone Config ziehen

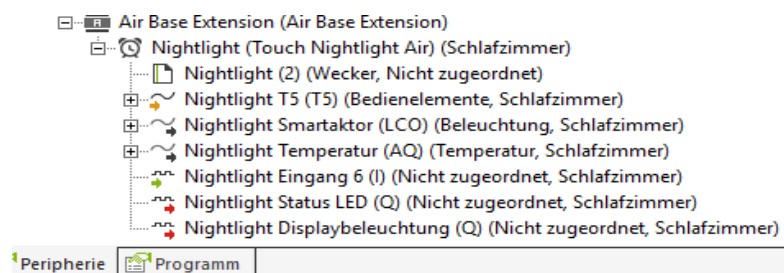

### 6 | Baustein Wecker konfigurieren:

[loxone.com/help/alarmclock](https://loxone.com/help/alarmclock)

### 7 | Funktionsbeschreibung

[loxone.com/help/touchnightlight](https://loxone.com/help/touchnightlight)

#### Published by

Loxone Electronics GmbH  
Smart Home 1  
4154 Kollerschlag  
Austria  
Tel: +43 7287 7070-0  
loxone.com

# Commissioning and installation instructions

## Touch Nightlight Air

Part No.: 100340



### 01 | Power supply



US Adapter



UK Adapter



EU Adapter



+ Micro USB & USB

### 02 | Learn-in Mode – 5 seconds key T7



### 03 | Learn-in Loxone Air device:

[loxone.com/help/airdevice](https://loxone.com/help/airdevice)


### 04 | Connecting T5, alarm clock and smart actuator:

[loxone.com/help/smartaktor](https://loxone.com/help/smartaktor)

[loxone.com/help/touchnightlight](https://loxone.com/help/touchnightlight)

### 05 | Loxone Config:

Pull the "Touch Nightlight Air" module from the peripheral tree into the Loxone Config:

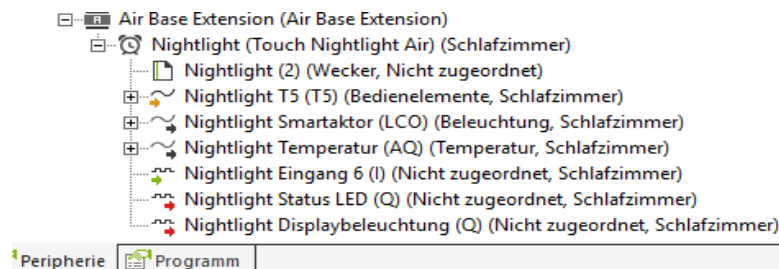

### 06 | Configure alarm clock module

[loxone.com/help/alarmclock](https://loxone.com/help/alarmclock)

### 07 | Description of function

[loxone.com/help/touchnightlight](https://loxone.com/help/touchnightlight)

#### Published by

Loxone Electronics GmbH  
 Smart Home 1  
 4154 Kollerschlag  
 Austria  
 Tel: +43 7287 7070-0  
 loxone.com