

Need Help?

For further information and documentation please  
visit: [www.loxone.com/help/ir-module](http://www.loxone.com/help/ir-module)



[www.loxone.com](http://www.loxone.com)

LOXONE

Get in Touch!

[office@loxone.com](mailto:office@loxone.com)  
[www.loxone.com/contact](http://www.loxone.com/contact)

[www.loxone.com](http://www.loxone.com)

# IR Module

Information / Installation place

Serial Number

LOXONE

## PIN Diagram

### PIN Description

1	+ 24V
2	Ground
3	Next IR-Module B
4	Input B
5	Input A
6	Next IR-Module A
7	+ 24V
8	Ground

### **i** Information

- Twisted pair cable (Network cable CAT5 or equivalent) recommended.
- Don't forget to terminate the Loxone Bus with a 120Ω resistor after the last Extension.

