

## Technical Specifications

<b>Infrared</b>	Internal IR Receiver & Transmitter Optional external IR Transmitter (4x) and Receiver (1x)
<b>Mounting</b>	Simple attachment via provided velcro tape
<b>Power Supply</b>	5VDC via Micro USB Connector
<b>Power Consumption</b>	typ. 0.1W
<b>Radio Frequency</b>	868MHz (SRD Band Europe), 915MHz (ISM Band Region 2) max. Power 3.16mW
<b>Ambient Temperature</b>	0...55°C / 32...131°F
<b>Humidity</b>	95% r. H. (non condensing)
<b>Dimensions</b>	90x49x14mm / 3.54x1.93x0.55"
<b>Safety Protection</b>	IP20

# LOXONE

No Gimmicks.  
Real Smart Homes.

LOXONE

## Need Help?

[loxone.com/support](https://loxone.com/support)

Loxone Electronics GmbH  
Smart Home 1  
4154 Kollerschlag  
Austria

[loxone.com](https://loxone.com)



# IR Control Air

Part No.: 100141



## About the product

With the IR Control Air you can seamlessly integrate infrared devices into your Loxone Smart Home. For example your TV, and other cinema equipment, projectors, aircon units and more.

## Features

- Infrared Communication
- Easy mounting
- Optional external IR Transmitters and Receivers

## Information

Contains FCC ID: COR-ZWIR4512AC1

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation



For additional information, declaration of conformity, visit [www.loxone.com/help/ir-control-air](http://www.loxone.com/help/ir-control-air)

## Installation

Mount the product near the device you want to communicate with using the provided velcro. Make sure that the internal sensors are in visibility of the IR Receiver or Transmitter, if not use the provided external IR Receiver or Transmitters. Power up the device with the provided power supply. Once powered pair the device with your Miniserver using Loxone Config.

