# **Technical Specifications**

Surface Material	Stone, Wood, Ceramic or Glass – Please note that this product will not work with conductive materials.
Surface Thickness	max. 30mm / 1 3/16"
Power Supply	928VDC PELV or Battery Pack (Not included)
Power Consumption PELV Powered	typ. 67mW, max. 133mW (when LEDs on)
Power Consumption Battery Powered	typ. 0.25mW, max. 100mW (when LEDs on)
Battery Lifetime	Approx. 2 years
Radio Frequency	868MHz (SRD Band Europe), 915MHz (ISM Band Region 2) max. Power 3.16mW
Ambient Temperature	055°C / 32131°F
Humidity 95% r. H.	(non condensing)
Safety Rating	IP20
Maintenance & Cleaning	This device is free of main- tenance and may only be cleaned with a dry cloth.

### Connection

Wire Diameter	0.141mm2 / AWG18AWG25
Exposed Wire Length	7mm / 9/32"
Push-In-Technology	To make a connection, insert the wire; to remove the wire twist and pull at the same time.

### Information

Contains FCC ID: COR-ZWIR4512AC1
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

# LOXONE

No Gimmicks.

# **Need Help?**

loxone.com/suppor

Loxone Electronics GmbH Smart Home 1 4154 Kollerschlag Austria

oxone.com



**LOXONE** 

# Touch Surface Air

Part No.: 100285





## About the product

Installed underneath your non-conducting surface (Note the max. surface thickness of 30mm), the Loxone Touch Surface gives you the possibility to control your smart home using the Loxone switch standard.

To prevent accidental use, there is an activation button. Upon touching this button, the five touch points of the switch are activated for 5 seconds, and the remaining time will be displayed through the activation indicator. If the activation function is not needed, the activation button can be reconfigured as necessary in Loxone Config.

#### **Features**

- · Loxone Switch Standard
- · Accidental operation protection
- · LED activation indicator

#### Installation

#### Installation without activation indicators

If you would prefer not to install the light pipes or mark the surface at all you can use the provided decal to show the touch points.

Mount the Touch Surface to the underside of the surface. Once powered up, learn-in and configure the Touch Surface using Loxone Config.



For additional information, declaration of confirmity, visit www.loxone.com/help/touch-surface-air

#### Installation with activation indicators

Prepare the surface on which the Touch Surface is to be installed by drilling 5 holes for the LED indicator lights and marking the touch points (We strongly recommend that the holes are drilled by a professional to avoid damage to the surface)

The activation indicator lights need to be installed on the Touch Surface prior to mounting it.

Mount the Touch Surface to the underside of the surface. To seal the holes for the activation indicator lights, use a transparent epoxy resin. It is important to ensure that no dirt or grit is present in the holes or on the underside of the mounting surface prior to using the resin. When applying the resin ensure that no gir bubbles are created.

Once powered up, learn-in and configure the Touch Surface using Loxone Config.



